



PHASE LED must be full on for full output. Use 12VAC adapter. Single adapter uses J6

Product of Old Crow
<http://www.crow.com/crowninius>
<http://oldcrowbolders.com>
APR 2015
REV 1.1

Thank you
Dr. Hoop

PHASE LED must be full on for full output. Use 12VAC adapter. Single adapter uses J6